

Tighe&Bond
Engineers | Environmental Specialists

LEGEND

REMOVE DRYWALL/ASBESTOS TAPING COMPOUND FROM FLOOR TO FOUR FEET IN CUSTODIAN CLOSET.


REMOVE DRYWALL/ASBESTOS TAPING COMPOUND IN ENTIRELY IN NURSE'S ROOM (REMOVE OUTSIDE CORNER EDGE AND ASBESTOS TAPING COMPOUND TO FACILITATE RESTORATION). CLEAN AND DISINFECT AREA.

GENERAL NOTES

ASBESTOS DRYWALL WORK SHALL BE CONDUCTED WITHIN NEGATIVE PRESSURE ASBESTOS CONTAINMENTS.

NON-ASBESTOS DRYWALL REMOVAL WORK SHALL BE CONDUCTED WITHIN ONE LAYER NEGATIVE PRESSURE CONTAINMENTS.


DRAFT - NOT FOR CONSTRUCTION

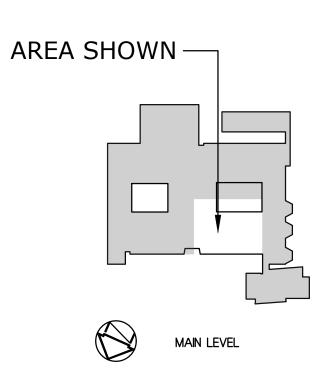

Northeast Elementary School

City of Stamford

Stamford, CT

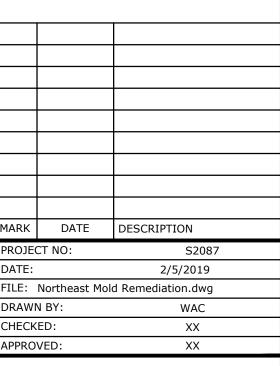

AREA 2

SCALE: NOT TO SCALE

FIGURE 3.2